


DKBI 型 往復動用ダストシール

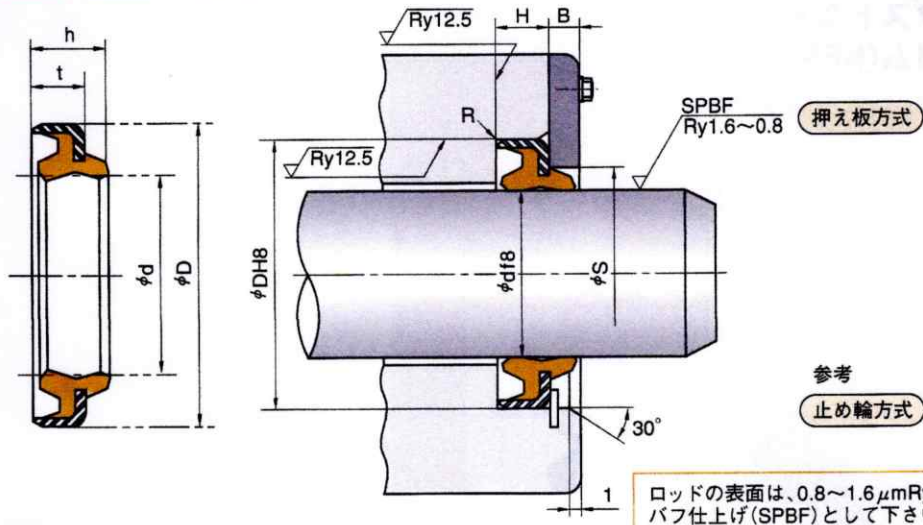

ダストシール呼び寸法

装着部寸法

d	D	t	h	φd	φD	φS	H	B
20	32	6	9	20	32	27	6 ^{+0.03}	4
25	37			25	37	32		
30	42			30	42	37		
32	44	7	10	32	44	39	7 ^{+0.03}	
34	46			34	46	41		
35	47			35	47	42		
38	50			38	50	45		
40	52			40	52	47		
45	57			45	57	52		
50	62			50	62	57		
55	69	8	11	55	69	62	8 ^{+0.04}	
60	74			60	74	67		
65	79			65	79	72		
70	84			70	84	77		
75	89			75	89	82		
80	94			80	94	87		
85	99	11	11	85	99	92	9 ^{+0.04}	
90	104			90	104	97		
95	109			95	109	102		
100	114			100	114	107		
105	121	9	12	105	121	113	10 ^{+0.05}	
110	126			110	126	118		
115	131			115	131	123		
120	136			120	136	128		
130	146			130	146	138		
140	160	10	14	140	160	150	10 ^{+0.05}	